



MOBILE EXTRUSION UNIT FOR 12-20 KG PAILS

MOBIL PUMPLYFT FÖR 12-20 KG HINKAR



Part No. / Art.nr.:
18200

GENERAL / ALLMÄNT**DESCRIPTION****EN****BESKRIVNING****SE**

Low pressure air powered portable grease pump unit. This machine, supplied with all the components needed for its operation, has been designed to be as mobile as possible and due to its pneumatic operated follower plate, keeps always the pump primed, making use of the compatible pails, diameter between 260 - 298 mm (10,2 - 11,7 inches), and a maximum of 400 mm (15,75") height.

The included pump is a 60:1 ratio. This piston reciprocating pump allows pumping all types of greases, and it is suitable for facilities with long length piping and several simultaneous grease outlets.

In case of having acquired the unit (18200), it includes a 3 m length high pressure grease hose, a grease control gun with rigid stem, 3 jaw connector and a Z swivel.

The recommended use of this equipment under normal conditions is with greases up to NLGI-3.

SAFETY PRECAUTIONS / SÄKERHETSFÖRESKRIFTER**WARNING AND CAUTIONS****EN**

This symbol aware of serious bodily injury or death if you ignore the warning described.



This symbol aware of personal injury or property damage if you ignore the caution described.

**READ BEFORE USE****VARNING OCH FÖRSIKTIGHET****SE**

Denna symbolen varnar för allvarliga skador eller död om föreskrifterna inte följs.



Denna symbolen varnar för allvarliga person- eller materialskador om föreskrifterna inte följs.

**LÄS INNAN ANVÄNDNING****SE**

Läs alla bruksanvisningar, taggar och etiketter innan du använder apparaten.

Denna utrustning är endast avsedd för professionell användning.

Ändra eller modifiera inte denna utrustning. Använd äkta komponenter från Alentec & Orion AB.

De icke-kompatibla vätskorna kan orsaka skador i pumpen och allvarliga personskador.

Pumpen genererar höga eller mycket höga tryck. Överstig inte maximalt lufttryck på 10 bar.

Var noga med att låsa hjulbromsen under maskinen efter färdigställd rörelse.

Använd inte någon ventil med utloppsporten vänd mot en annan person eller dig själv under maskinens drift under alla omständigheter. Ett direkt slag mot människokroppen kan leda till skada.

När maskinen ej används, stäng av lufttillförseln för att undvika olyckor.

När du använder lyftventilen, rör inte enheten och se till att ingen berör den. Det finns klämrisk i pannan och pumpstödet.

För att skydda utrustningen under transporten har vi applicerat ett lager av skyddande vattenlöslig olja i flera delar av utrustningen. Var vänlig och var försiktig när du arbetar med det eller hanterar utrustningen.

This equipment is for professional use only.

Do not alter or modify this equipment. Use genuine components provided from Alentec & Orion AB.

The non compatible fluids may cause damage in the pump and serious personal injury.

The pump generates high or very high pressures. Do not exceed the maximum air inlet pressure of 10 bar.

During the machine operation or after completion of movement, be sure to lock the caster brake for locking.

Do not operate any gun lever with the discharge port facing to another person or yourself during the machine operation in any case. A direct hit against the human body may result in an injury.

When not in use, be sure to shut off the air supply to avoid accidents.

When you operate the lift valve, do not touch the unit and ensure that nobody is touching it. It is a risk of trapping within the pail and the pump support.

In order to protect the equipment during the transport, we have applied a layer of protective water-soluble oil in several parts of the equipment. Please notice it and be careful when you work with it or handle the equipment.

INSTALLATION

INSTALLATION

EN

INSTALLATION

SE

The portable grease pump unit is supplied with all the necessary elements for its installation. It is also totally assembled, missing the assembly of the handlebar.

Once verified that the package contents all the elements, (fig. 2), and the handlebar is assembled (fig. 4), connect the air inlet to an 10 bar maximum compressed air line using the air inlet (pos. 5).

Use the inductor pressure control (pos. 6) to adjust the lifter pressure 5.5 and 6 bar (fig. 3).



WARNING

This equipment shares the air inlet between the pneumatic actuator and the grease pump. The pressure regulator (pos. 6), manages the pneumatic actuator only and the air pressure in the pump (the air line one), so to prolong the pump's lifetime, manage it with the pump's filtering regulator (pos. 4).

Use the air regulator to reach the recommended working pressure of the actuator, it should be between 3 - 3,5 to 5,5 - 6 bar (pos. 6).




WARNING

Denna utrustning delar luftinloppet mellan pneumatiskt manöverdon och fettpumpen. Tryckregulatorn (pos 6), hanterar endast pneumatiska manöverdonet och lufttrycket i pumpen (luftledningen), så för att förlänga pumpens livslängd, hantera den med pumpens filtreringsregulator (pos 4).

Använd luftregulatorn för att nå det rekommenderade arbetstrycket på ställdonet, det ska ligga mellan 3 - 3,5 till 5,5 - 6 bar (pos 6).

| Included in | Pos. | Item description |
|-------------|------|----------------------------|
| 18200 | 1 | Lifter control |
| | 2 | Pail Fasteners |
| | 3 | Follower plate air bleeder |
| | 4 | Air inlet pump valve |
| | 5 | Quick coupler |
| | 6 | Inductor pressure control |
| | 7 | Actuator |
| | 8 | Follower plate |
| | 9 | Swiveling Wheels |

| Inkluderas i | Pos. | Beskrivning |
|--------------|------|----------------------|
| 18200 | 1 | Lyftreglage |
| | 2 | Hink fästdon |
| | 3 | Fölskiva avlufture |
| | 4 | Luftintag pumpventil |
| | 5 | Snabbkoppling |
| | 6 | Induktortryckreglage |
| | 7 | Manövereringsorgan |
| | 8 | Fölskiva |
| | 9 | Svänghjul |

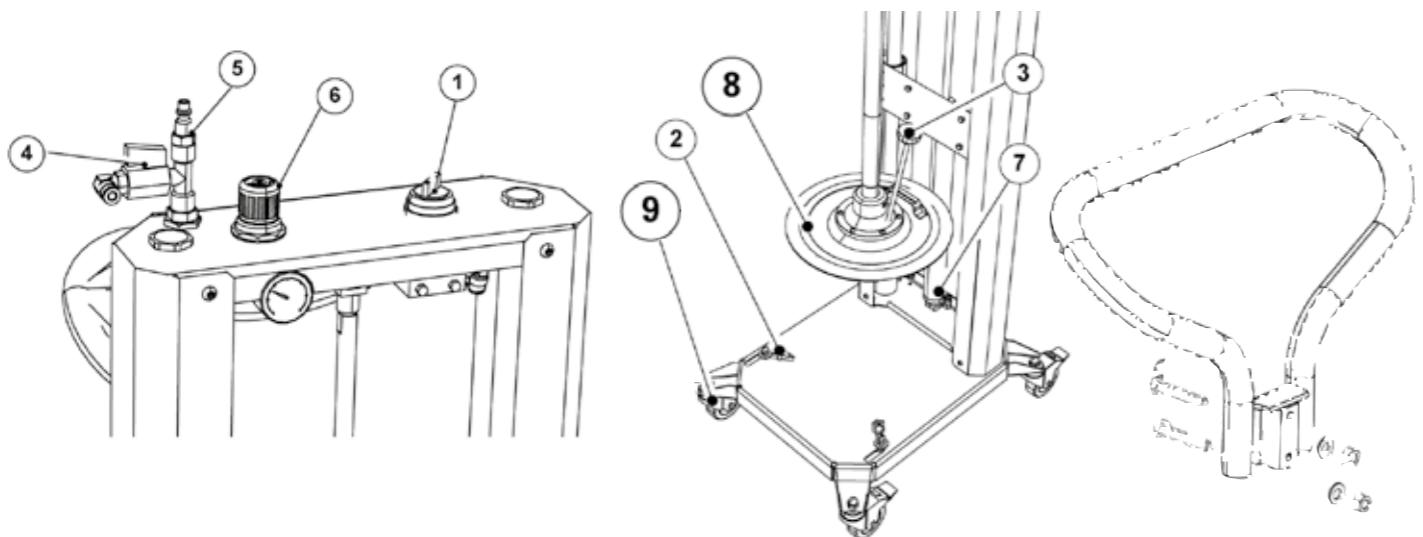

INSTALLATION

GREASE PAIL INSTALLATION

EN

INSTALLATION AV FETTHINKAR

SE

- Unscrew the follower plate air bleeder (fig. 5).
- Turn the lifter control (pos. 1) (fig. 6) to the "up" position to lift the pump and the follower plate to the top.
- Open the pail fasteners. (fig. 12).
- Place a compatible grease pail. Compatible pails with exterior diameter between 260-298 mm (10,2-11,7 inches), and maximum of 400 mm (15.75"), height.
- Close the pail fasteners (fig. 12).
- Turn the lifter control (pos.1) to the "off" position. The pump and the follower plate will approximate to the pail.
- Check to see if the inductor plate is set correctly, and then continue compressing the grease inside the pail.
- Turn the lifter control (pos. 1) to the "down" position.
- When the grease is pushed out from the follower plate air bleeder opening, switch lifter control (pos. 1) to the "off" position.
- Screw the follower plate air bleeder (fig. 7).
- The equipment is ready to use.



CAUTION

This equipment is designed to use compatible pails with exterior diameter between 260 - 298 mm (10,2 - 11,7 inches), and a maximum of 400 mm (15.75") height.

Under normal use conditions, this equipment must be used with greases up to NLGI-3.

The non compatible fluids may cause damage in the pump and serious personal injury.





CAUTION

Denna utrustning är utformad för att använda kompatibla hinkar med ytterdiameter mellan 260 - 298 mm (10,2 - 11,7 tum) och högst 400 mm (15,75 tum) höjd.

Under normala användningsförhållanden måste denna utrustning användas med fetter upp till NLGI-3.

De icke-kompatibla vätskorna kan orsaka skador i pumpen och allvarliga personskador.

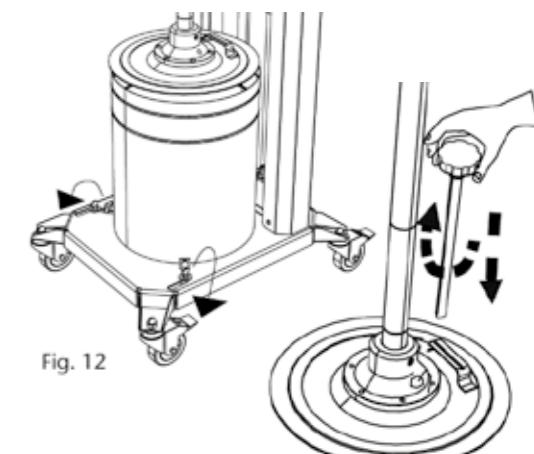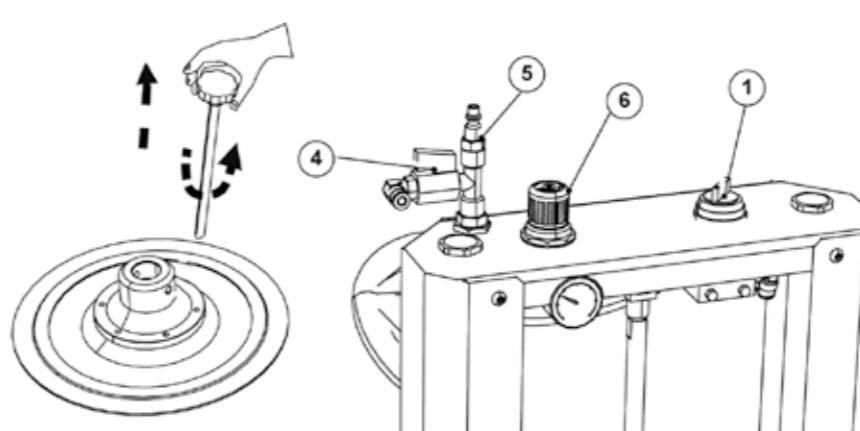

OPERATION / ANVÄNDNING

GREASE SUPPLY

EN

GREASE SUPPLY

SE


Once the pail is installed, to start discharging grease proceed to:

1. Switch the lifter control (pos. 1) to "down" position. The pump will be primed while the actuator compresses the grease (fig. 9).
2. Start the pump opening the pumps valve (pos. 4), and increasing the pressure with the regulating filter gradually. The pump starts operating. Be aware that the pressure in the pump is the air line one.
3. Use the unit as required. For example with its grease hose and control gun, (supplied with model 18200).




WARNING

While the equipment is connected to the air line, be aware of the danger of being trapped by the mobile elements of this equipment. For your own security and to prolong your pumps lifetime unplug the air inlet coupler after using this equipment.

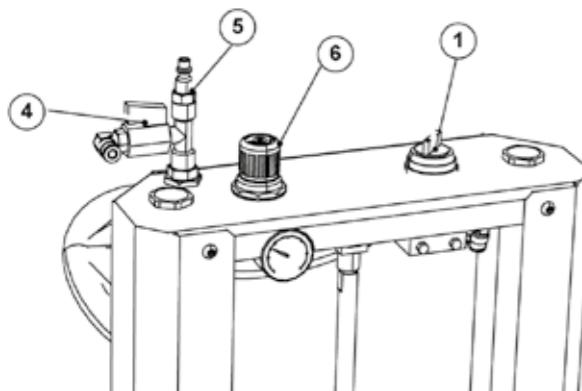

WARNING

Medan utrustningen är ansluten till luftledningen måste du vara medveten om risken för att fastna i en av de mobila elementen i den här utrustningen. För din egen säkerhet och för att förlänga dina pumpars livslängd ska du koppla ur luftinloppskopplaren efter användning.

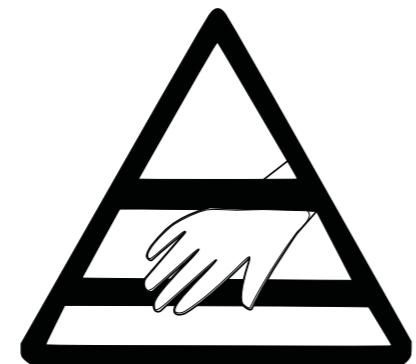

OPERATION / ANVÄNDNING

REMOVE THE GREASE PAIL

EN

TA BORT FETTHINK

SE

When the amount of the remaining grease in the pail is ending, the pump starts to work very quickly. Stop your work immediately closing the pump air inlet (pos. 4) (fig. 9). Remember that the lifter is still connected to the air inlet pressure. To remove the pail:

1. Loose the follower plate bleeder and remove it (fig. 11).
2. Switch the lifter control to "up" Position. The pump and the follower plate are lifted.
3. Open the pail fasteners (fig. 12).
4. Replace the pail following previous instructions.



CAUTION

If even loosing the bleeder the equipment is not able to lift the pump, do not force it. With a blow gun introduce compressed air trough the bleeder.

For your own security and to prolong your pump lifetime unplug the air inlet coupler after using this equipment.

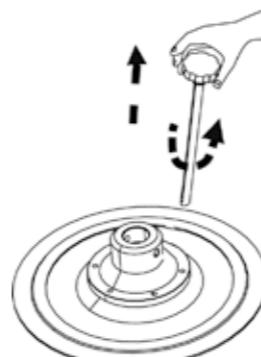


Fig. 11



CAUTION

Utan avlufturen kan utrustningen inte lyfta pumpen, tvinga den inte. Med en bläspistol införs tryckluft genom avlufturen.

För din egen säkerhet och för att förlänga pumpens livslängd ska du koppla ur luftinloppskopplaren efter användning.

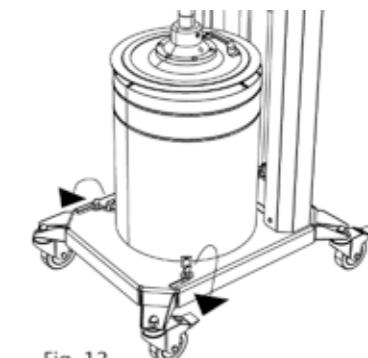


Fig. 12

TECHNICAL DATA / TEKNISKA DATA

| Technical data | Tekniska data | |
|-------------------------|----------------------|-----------------------|
| Maximum Air pressure | Maximalt lufttryck | 10 bar (140 psi) |
| Minimum air pressure | Minimalt lufttryck | 4 bar (58 psi) |
| Maximum grease delivery | Maximal fettleverans | 1000 gr/min (@ 7 bar) |
| Air inlet thread | Inloppsluft gänga | 1/2" BSP (F) |
| Grease outlet thread | Fett utlopp gänga | 3/8" BSP (F) |
| Pump tube diameter | Pump slang diameter | 30 mm |
| Overall height | Höjd | 1202 mm |
| Overall width | Bredd | 448 mm |
| Overall depth | Djup | 613 mm |

TROUBLESHOOTING / FELSÖKNING

| Symptoms | Possible Reasons | Solutions |
|---|---|---|
| The pump is not working or there is no fluid delivery. | No suitable air supply pressure. Some outlet circuit element is clogged or closed. Air between the follower plate and the grease. | Increase the air supply pressure. Clean or open the outlet circuit. Bleed the air. |
| The pump begins to operate very fast. | The drum is empty or the grease level is beneath the suction tube inlet. | Replace the drum. |
| The pump keeps on operating although the grease outlet is closed. | There is a grease leakage in some point of the circuit. | Verify and tighten or repair. |
| Grease leakage through the air outlet muffler. | Grease has passed over to the air motor caused by worn or damaged packing set. | Replace the packing set (repair kit). |
| Air leakage through the air outlet muffler. | The O-rings of the distributor axle or the bushing worn or damaged. The inverter O-rings are worn or damaged. | Replace the axle assembly and/or the bushing assembly. Replace the inverter O-rings. |
| Decrease of the grease delivery. | Dirt in upper valve or foot valve. Dirt in muffler. | Dismount and clean, replace if damaged. Clean or replace the muffler. |
| The pump doesn't lift even without the pail. | The actuator is not working with proper pressure. | Regulate the pressure in the actuator with its control with a pressure higher than 2 bar. |
| Leakage between the follower plate adaptor and the pump's tube or between the follower plate and the adaptor. | The seals are damaged. | Replace the seals from the follower plate assembly. |

RATING PLATE


EN

TYPSKYLT

SE


The part number and production number of the equipment can be found on the rating plate. Next figure shows rating plate position.

Artikelnummret och produktionsnummret finns på typskylten. Figuren visar var typskylten finns.

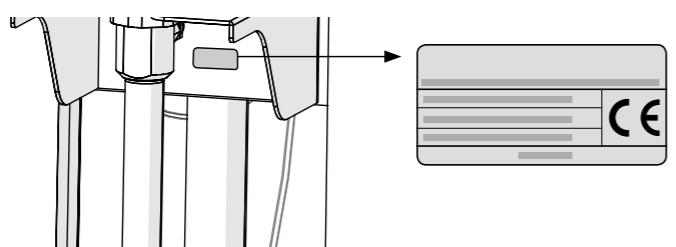

| Symptom | Orsak | Lösning |
|--|---|---|
| Pumpen fungerar inte, eller levererar ingen vätska. | Inget lämpligt lufttillförselstryck. Några utloppskretselement är igensatta eller stängda. Luft mellan följpallen och fetten. | Öka lufttillförselstrycket. Rengör eller öppna utloppskretsen. Avlufta. |
| Pumpen går väldigt snabbt. | Hinken är tom, eller så är fettnivån under sugrörets nivå. | Byt fetthinken. |
| Pumpen fortsätter jobba trots att fettutloppet är stängt. | Det finns läckage i någon punkt av kretsen. | Verifiera och dra åt, eller reparera. |
| Fettläckage genom luftuttagsljuddämparen. | Fett har kommit över till luftmotorn på grund av sliten eller skadad förpackningsuppsättning. | Byt utpackningssatsen (reparationssats). |
| Luftläckage genom luftuttagsljuddämparen. | O-ringarna på fördelaraxeln eller bussningen slitna eller skadade. Omriktarens O-ringar är slitna eller skadade. | Byt axelaggregatet och / eller bussningsaggregatet. Byt omriktarens O-ringar. |
| Minskande fettleverans. | Smuts i övre ventilen eller fotventilen. Smuts i ljuddämparen. | Demontera och rengör, byt ut om det är skadat. Rengör eller byt ut ljuddämparen. |
| Pumpen lyfter inte, även utan hink. | Manöverdonet arbetar inte med korrekt tryck. | Reglera trycket i manöverdonet med dess styrning med ett tryck högre än 2 bar. |
| Läckage mellan följeplattans adapter och pumpens rör eller mellan följpallen och adaptorn. | Tätningarna är skadade. | Byt tätningarna från följpallen. |

PARTS DRAWING / SPRÄNGSKISS

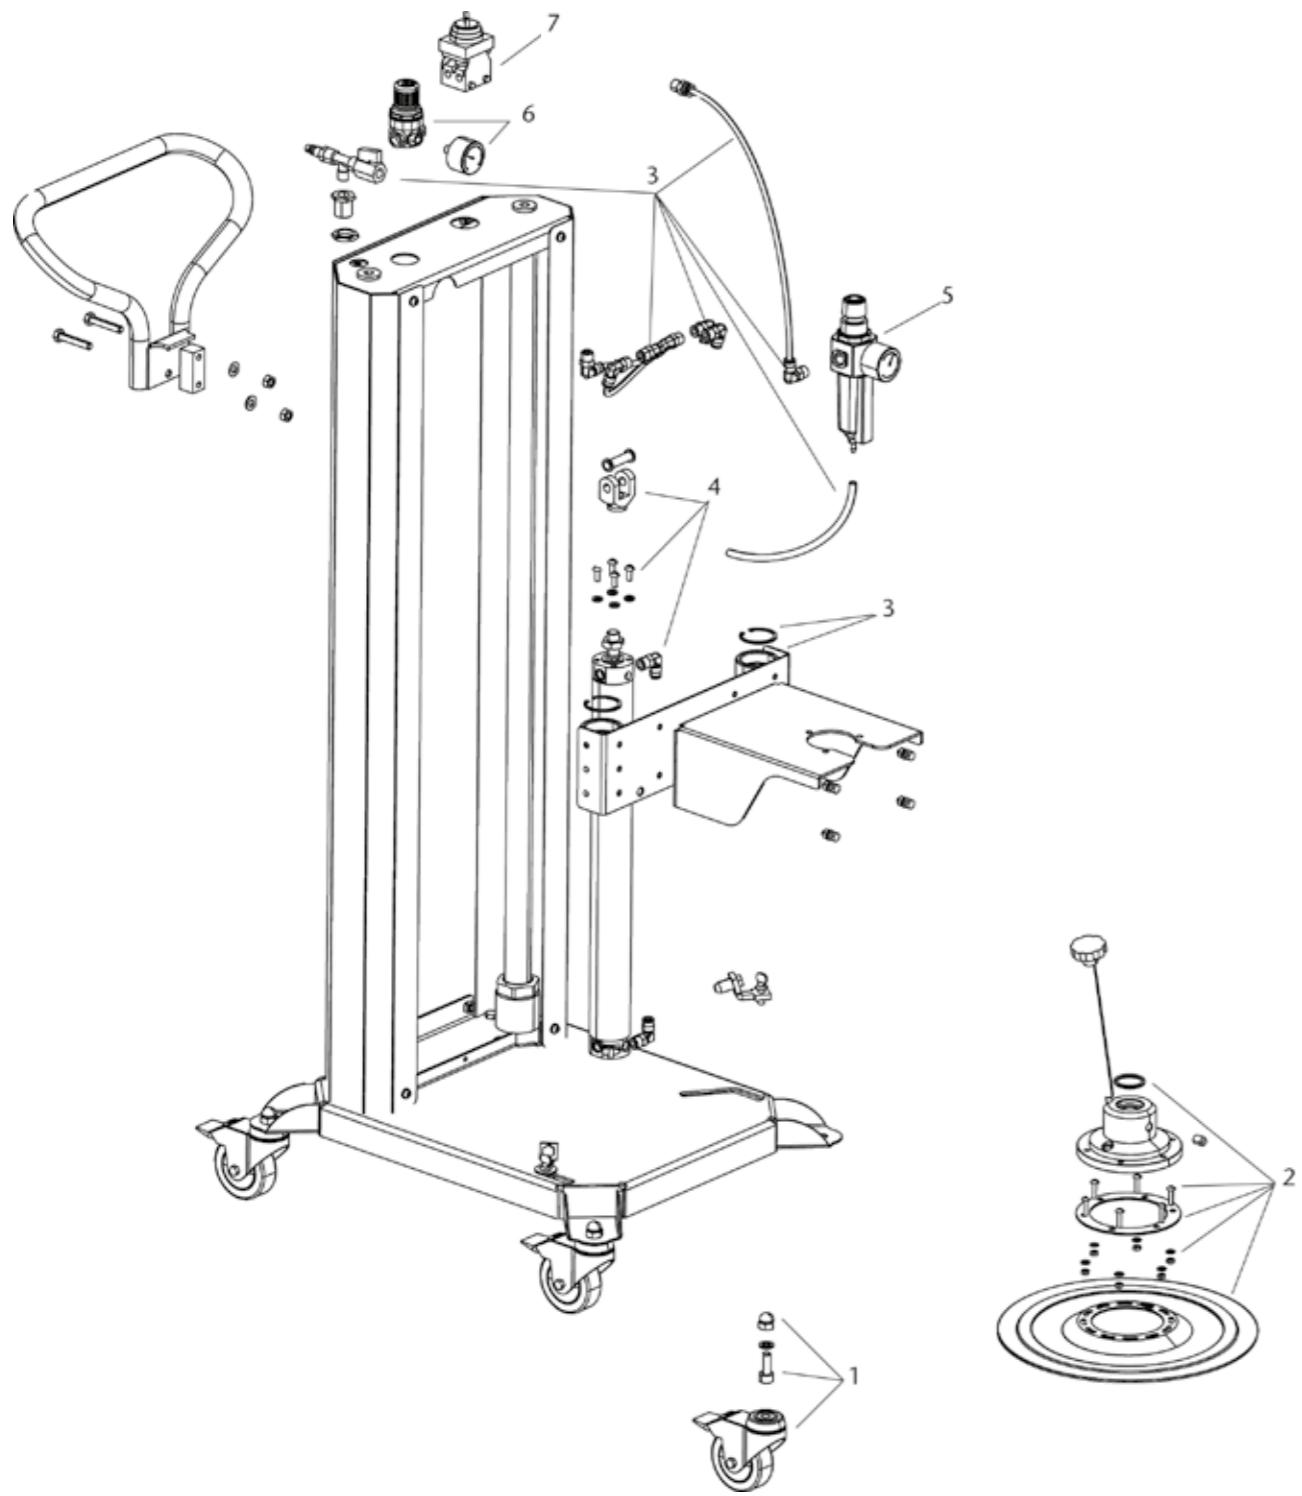

PARTS DRAWING / SPRÄNGSKISS

| Pos. | Part no. / Art.no. | Description | Beskrivning | Qty. / Antal |
|-----------|--------------------|---|----------------------------|--|
| 1. 742940 | 951275 | Swiveling wheel | Svänghjul | 1 |
| | 940340 | Socket head cap screw | Socket-skruv | 1 |
| | 942210 | Helical spring lock washer | Helikal fjäderbricka | 1 |
| | 941310 | Hexagon domed cap nut | Hexagonal kupol-mutter | 1 |
| 2. 742941 | 742215 | Follower plate | Följplatta | 1 |
| | 941105 | Self locking nut | Låsmutter | 6 |
| | 942005 | Washer | Bricka | 6 |
| | 940371 | Socket button head screw | Socketknapp-skruv | 6 |
| | 842500 | Flat gasket | Platt packning | 1 |
| | 946138 | O-ring | O-ring | 1 |
| | 942738 | Retaining clip | Klämma | 2 |
| 3. 742942 | 842600 | Bushing | Bussning | 2 |
| | 950322 | Air valve | Airventil | 1 |
| | 932108 | Flexible tube 8x6 | Slang 8x6 | 1 x 300 1 x 410 |
| | 932106 | Flexible tube 6x4 | Slang 6x4 | 1 x 1140 1 x 1020 1 x 200 1 x 180 |
| | 951460 | Straight adaptor | Rak adapter | 1 |
| | 951461 | Straight adaptor | Rak adapter | 1 |
| | 951463 | Swivel elbow adaptor | Vinklad adapter | 1 |
| | 951464 | Swivel elbow adaptor | Vinklad adapter | 5 |
| | 951476 | Swivel elbow adaptor | Vinklad adapter | 2 |
| | 951440 | Pneumatic cylinder | Pneumatisk cylinder | 1 |
| 4. 742943 | 951464 | Swivel elbow adaptor | Vinklad adapter | 2 |
| | 951441 | Clevis rod | Clevis-stång | 1 |
| | 942206 | Spring washer | Fjäderbricka | 4 |
| | 940321 | Socket button head screw | Socketknapp-skruv | 4 |
| | 5. | 240500 | Air filter-regulator | Airfilter regulator |
| 6. 742944 | 951458 | Air inlet pressure regulator | Inloppsluft tryckregulator | 1 |
| | 951305 | Pressure gauge | Tryckmätare | 1 |
| | 941033 | Pressure regulator locking nut | Tryckregulator låsmutter | 1 |
| 7. | 951457 | Lifter control | Lyftreglage | 1 |
| | 12651 | For pump parts drawing see pump manual. / För pumpens sprängskiss, se pumpens manual. | | |
| | 14612 | For control valve parts drawing see control valve manual. / För handventilens sprängskiss, se handventilens manual. | | |

EC CONFORMITY DECLARATION / EC KONFORMITETSDEKLARATION

EN

Alentec&Orion AB, Grustagsvägen 4, SE-13840, Älta, Sweden, declares by the present certificate that the mentioned machinery is in conformity with the EC Directive (2006/42/EEC).

SE

Alentec&Orion AB, Grustagsvägen 4, SE-13840, Älta, Sverige, deklarerar genom detta certifikat att de omnämnda utrustningarna är i överensstämmelse med EC Direktiv (2006/42/EEC).



Krister Tynhage
Managing Director