



Culvert entering at oil room walls and pillars

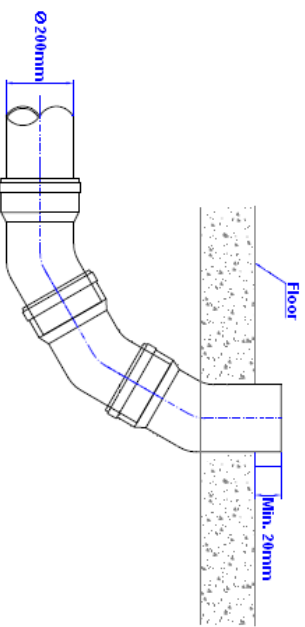


Dimensions and general information

Observe that exhaust channel and culvert are placed on different heights and that the culvert is moved sideways in the pit under service tower.
 All bends should be installed with 30° angles.
 Fasten and secure the pipes to avoid movement.
 Secure and seal all joints.
 All pipes except exhaust shall have pulling thread wire.

 Cable pipe, Ø50mm, for control cable to exhaust system and OrLink communication cable.
 Culvert pipe, Ø200mmx2st, between service tower, pits and oil room (PVC, smooth inside).



3D-view frame for service tower

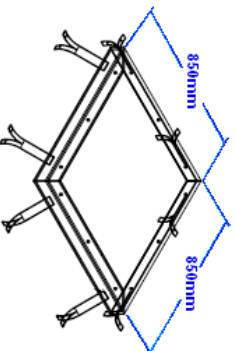

Delivered by Alenteck&Orion AB
 Installed by construction company